

## COMMON MOULDING APPLICATIONS

---

### **BACK BAND**

A rabbeted moulding used to surround the outside edge of casing.

### **BASE**

Applied where floor and walls meet, forming a visual foundation. Protects walls from kicks, bumps, furniture, etc. Base shoe and base cap are used to conceal uneven floor and wall junctions.

### **BASE CAPS**

A decorative member installed flush against wall at the top of an S4S baseboard. Can be used as panel moulding.

### **BASE SHOES**

Applied where base moulding meets floor. Protects base from damage. Conceals uneven lines or cracks.

### **BEDS**

Used where walls and ceiling meet. Installed either as flat or projected from surface.

### **BRICKMOULD**

Used as an exterior door and window casing. A thick moulding providing a surface for brick or other siding to butt against.

### **CASING**

Used to trim inside and outside of door and window openings.

### **CHAIR RAIL**

Interior moulding applied about one third up from the floor, paralleling base moulding and encircling the room.

### **CORNER GUARDS**

Outside (OS) corner guard is used to protect corners or to cover ragged edges where wall covering and painted surfaces meet at outside corner.

### **COVES**

Concave profile. Used at corners, particularly as a ceiling cornice.

### **CROWNS**

Used where wall and ceiling meet. Used to cover large angles; always installed projected from surface.

### **DRIP CAPS**

Applied over exterior window and door frames. Keeps water from seeping under the siding. Also directs water away from window glass.

### **HAND RAIL**

Used as a hand support in a stairwell.

### **HALF ROUNDS**

Can be used as a screen moulding, bead shelf edge or panel moulding.

### **LATTICE**

Originally used in trellis work. This small, plain S4S moulding is among the most versatile of profiles.

### **PANEL MOULD**

Used to form panels on walls, ceilings or built up cornice applications.

### **QUARTER ROUNDS**

May be used as a base shoe, inside corner moulding, or to cover any 90 degree recessed junction.

### **ROUNDS**

Most often used as a closet pole.

### **SHELF EDGE / SCREEN MOULD**

Used to hold glass in place. Also called glass stop, cove and bead, putty bead, glazing bead and staff bead.


### **STOP**

Nailed to the face of the door frame to prevent the door from swinging through.

### **WAINSCOT CAP**

Trims out the upper edge or top of a wainscot. Covers plywood's rough sawn edge in installations where it's exposed to view.

---

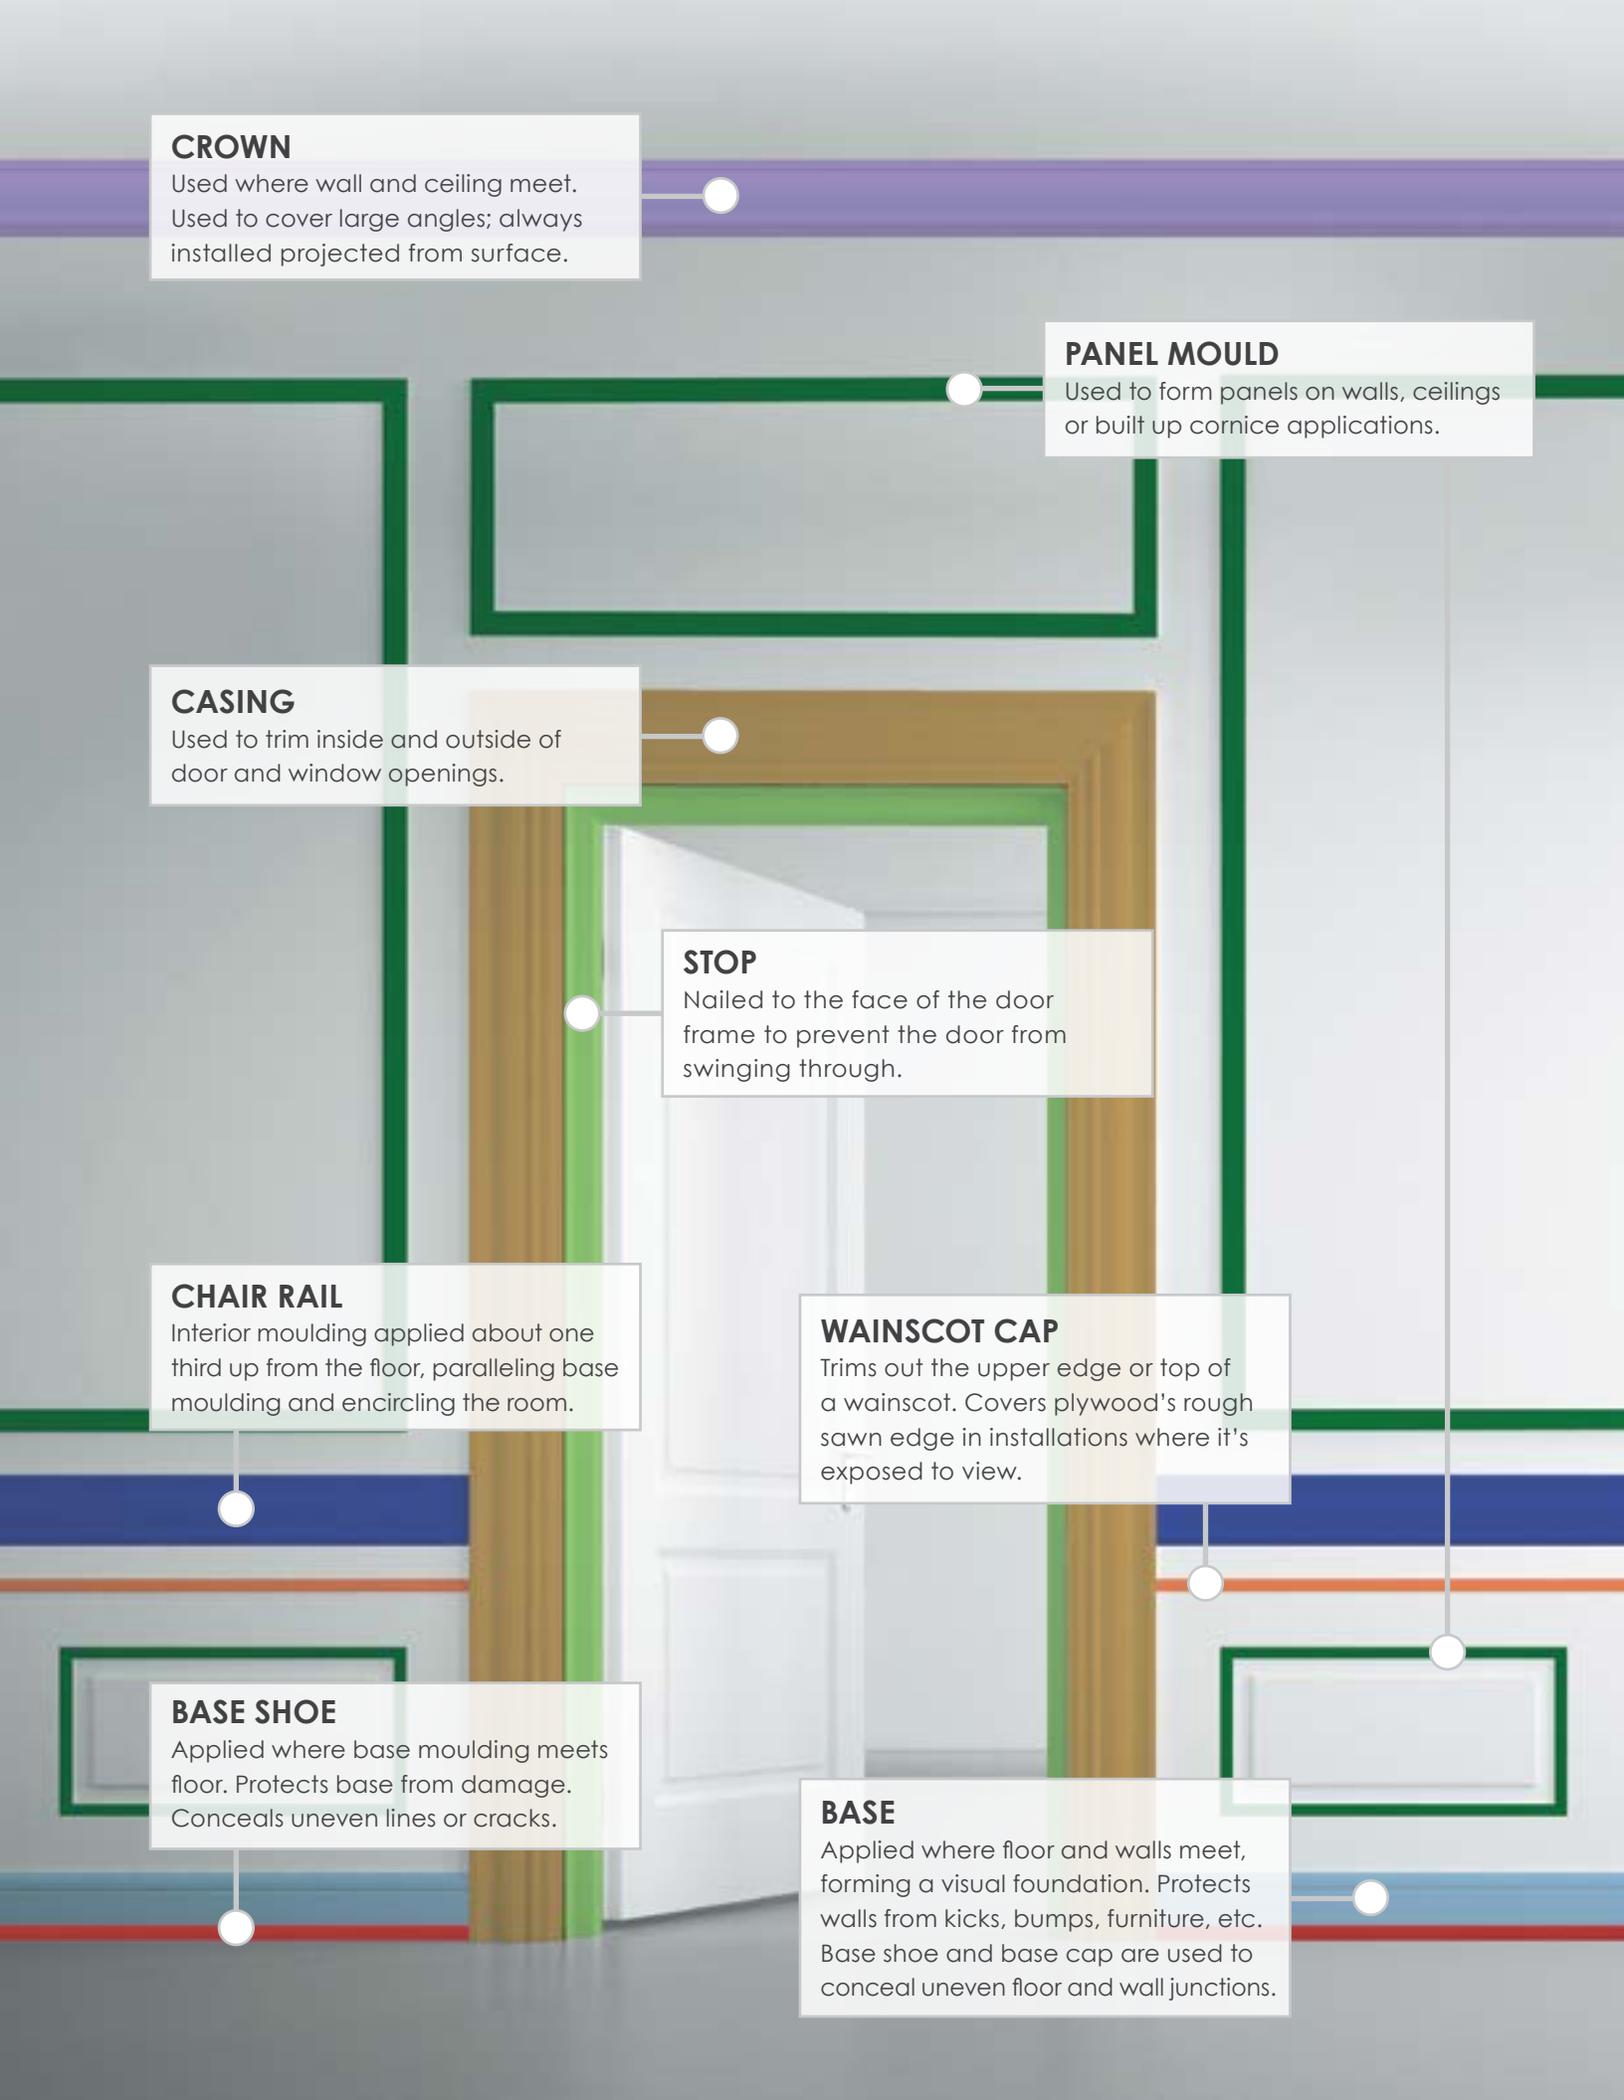

### CROWN

Used where wall and ceiling meet.  
Used to cover large angles; always installed projected from surface.

### PANEL MOULD

Used to form panels on walls, ceilings or built up cornice applications.

### CASING

Used to trim inside and outside of door and window openings.

### STOP

Nailed to the face of the door frame to prevent the door from swinging through.

### CHAIR RAIL

Interior moulding applied about one third up from the floor, paralleling base moulding and encircling the room.

### WAINSCOT CAP

Trims out the upper edge or top of a wainscot. Covers plywood's rough sawn edge in installations where it's exposed to view.

### BASE SHOE

Applied where base moulding meets floor. Protects base from damage. Conceals uneven lines or cracks.

### BASE

Applied where floor and walls meet, forming a visual foundation. Protects walls from kicks, bumps, furniture, etc. Base shoe and base cap are used to conceal uneven floor and wall junctions.